



### Template for a Tyvek Drawer Liner

1. Measure the interior height, width, and depth of your drawer.

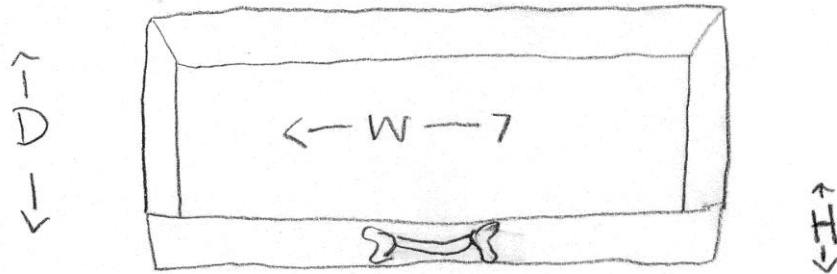

2. Lay your paper on a flat surface. If you are making one liner, you can do this directly onto the Tyvek. If you are making multiple liners of the same size, use craft paper so that you can reuse the template.
3. Place the drawer on the paper or Tyvek. With a pencil, lightly trace the bottom of the drawer. Remove the drawer and adjust your drawing so it reflects the inner measurements of the drawer.
4. Continue the drawing, based on your interior measurements, until it looks like a "T" and has enough sections to line the bottom, sides, and top of the drawer.

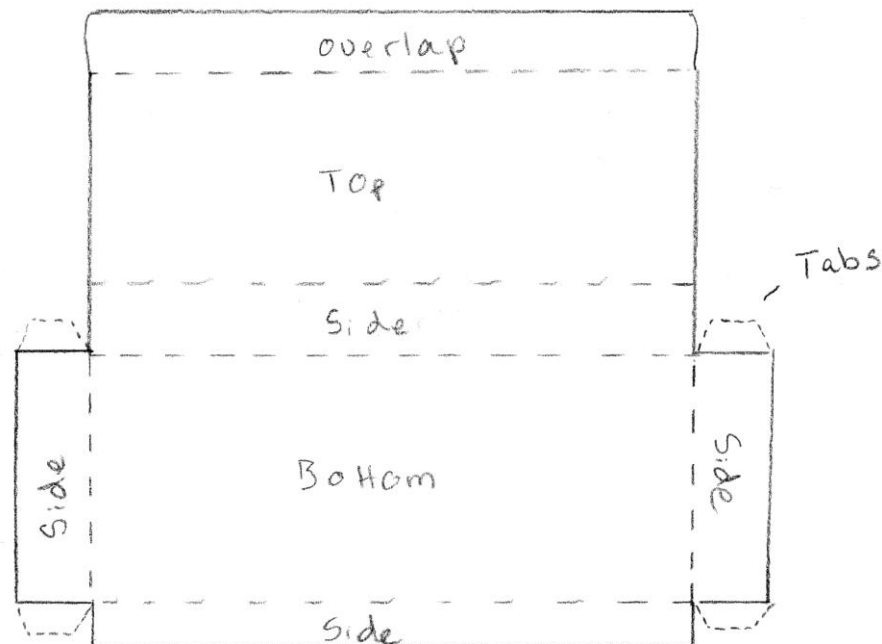

5. Draw tabs on the side wings of the "T" that will allow you to tape the drawer once you've assembled it into 3-dimensional form.
6. Fold the liner into shape and tape the tabs to the *exterior* of the liner with double-stick or other tape. Never put tape inside the liner.